

INDIVIDUAL USE


SC0050
white finish

High Speed Hair Dryer


SC0050B
black matt finish

General description

- Exclusive hotel bathroom wall mounting hair dryer with a functional, robust and trendy design that blends into any space perfectly.
- This powerful and long-lasting hair dryer is push-button activated and has a total power of 2.000 W.
- Rear 3-position slide switch for OFF, minimum and maximum air speed settings. Rear push button to select air temperature: Min (heating off, ambient air), Mid and Max.




Components & materials

- SC0050:** plastic ABS, white finish.
- SC0050B:** plastic ABS, black matt finish.
- ABS plastic wall support.
- The heating element includes a safety thermal cut-out.
- Push button with three temperature settings. LED colors indicate the selected temperature (blue for cool shot, orange for warm and red for hot heating).
- Front safety power push switch, specially designed for hotel applications. The hair dryer only operates while the switch is being pressed, preventing it from being left running over the basin.
- Coiled cable from base to hair dryer with a length of 1.600mm. Plug with 900mm power cord.
- Wall mounted hair dryer to improve vandal-proof properties.
- Removable air filter.
- Magnetic air diffuser.
- The hair dryer includes an ion generation system that neutralizes the hair's static charge, eliminating frizz and helping to maintain its natural moisture.

Technical Specifications

Voltage	220-240 V
Frequency	50/60 Hz
Electrical Isolation	Class II
Total power	75-2.000 W
Consumption	0,6-8,4 A
Rpm	90.000 rpm
Dimensions	285 x 138 x 97 mm
Weight	0,86 Kg
Air velocity	108-152 Km/h
Air temperature (10 cm distance/25°C)	77 °C
Protection rating	IPX0

Dimensions

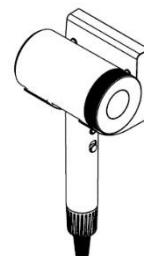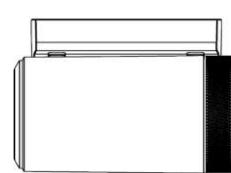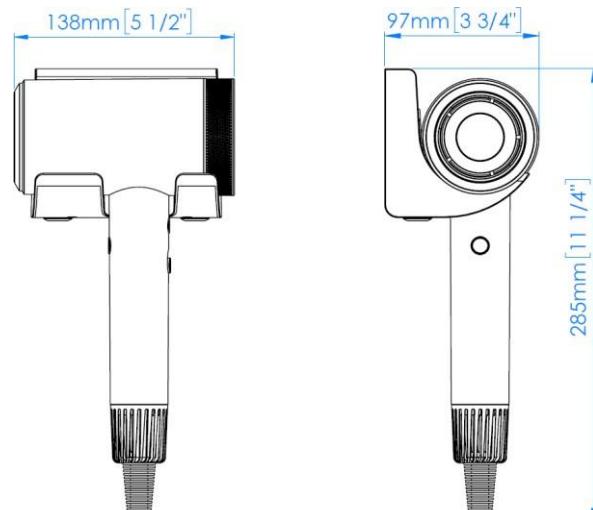


Dimensions ± 4%

Operation

Plug the hair dryer to the mains and pick up the dryer body. The dryer will only work when the spring button is held on; move the push button up and down for higher or lower speed. "I" for minimum speed, "II" for maximum speed, "O" for OFF. The temperature button operates in a cyclic manner. Each press changes the mode in the following sequence: cool, warm, hot, and back to cool.

Mounting

Recommended heights distance from the floor

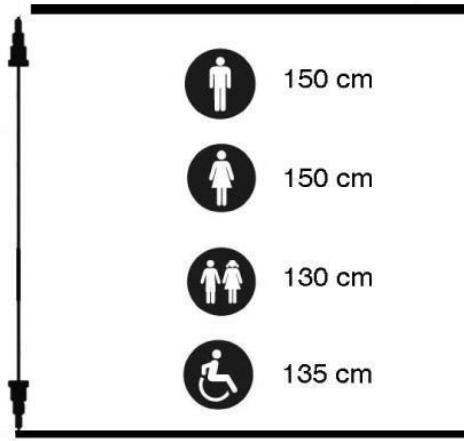

Certificates & Qualifications



Mediclinics, S.A., reserves the right to make changes and/or modifications to the products and their specifications without prior notice.
Review 12-25

© mediclinics S.A.

